



HOW TO FOLD A PRISM


STEP 1: APPLY DOUBLE SIDED SELF ADHESIVE TAPE

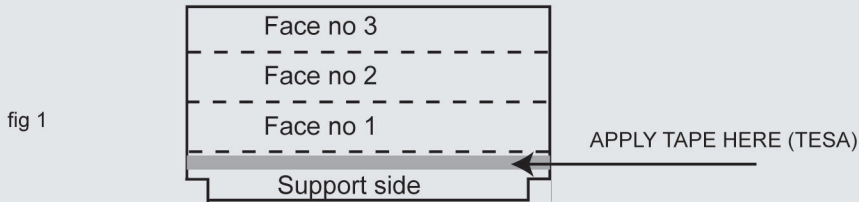

STEP 2: FOLD THE PRISM AT THE FOLDING POINTS (so it starts to look as the shape of a prism)

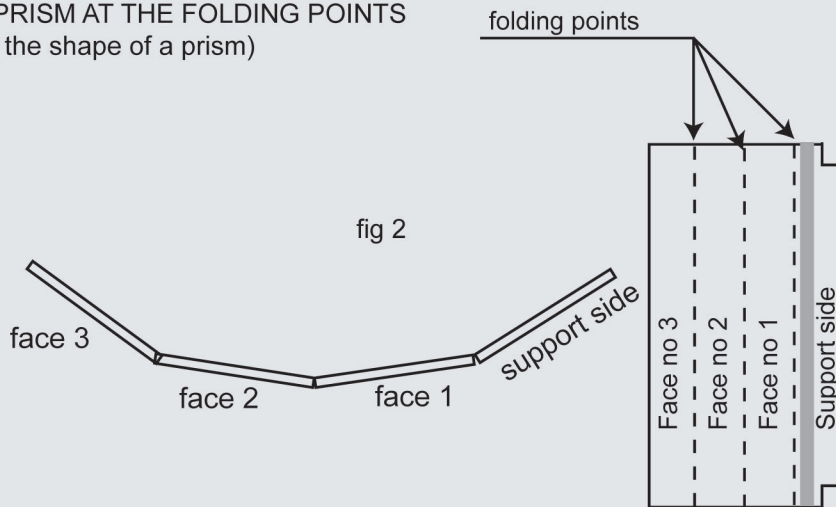

STEP 3: PLACE THE PRISM IN THE JIG AND REMOVE THE CARRIER OF THE TAPE (remove the carrier once the cardboard prism looks as on the underneath sketch)

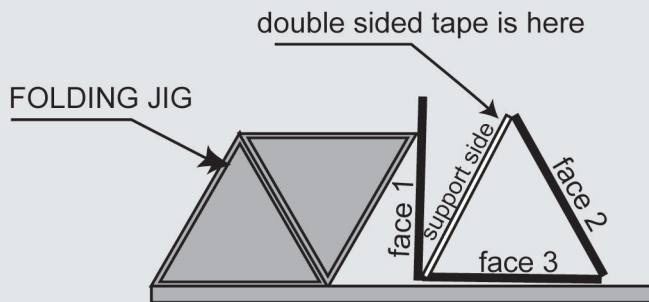

STEP 4: PUSH THE PRISM INTO THE JIG WITH AN EVEN PRESSURE, MAKE SURE TO HOLD IT THERE FOR AT LEAST 5 SECONDS

